

## ISTRUZIONE DI MONTAGGIO FITTING INSTRUCTIONS


Pag. 1 di 1

Data 2/5/2007

N° 11 4013 00

Sparco S.p.A. – Km0,500 Autostrada Torino Milano, Torino – tel. 0112240911 – Fax. 0112240900

## art. 00499061

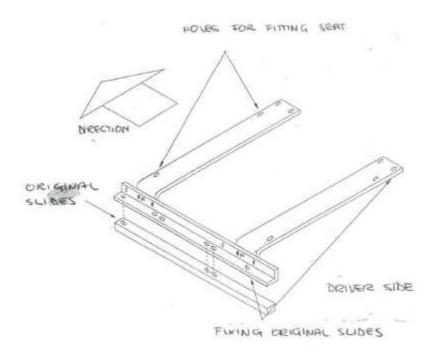

## **ENGLISH - Seat subframe**

The SPARCO subframe dor Renault Clio I (1990 $\rightarrow$ 1998) is suitable to use original slides. The adaptors must be fitted on original slides and then, on the slides, the seat.

In the picture below is shown the driver seat fiting; for co-driver seat the position of subframe must be rotate  $180^{\circ}$  and holes not used in the picture should be used.

Two holes with "R" letter must be used for driver and co-driver position. For PRO2000 seat, please use two spacers between the adaptor and the seat to take the seat 3 cm up.