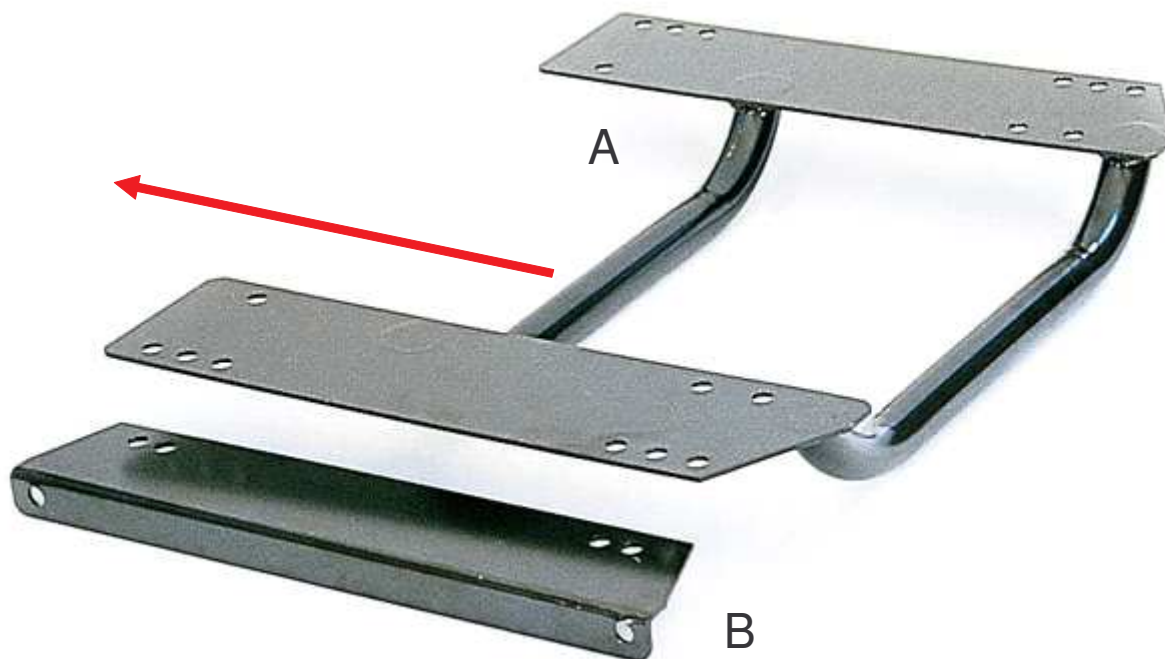


Sparco S.p.A. – Km0,500 Autostrada Torino Milano, Torino – tel. 0112240911 – Fax. 0112240900

Art. – 00499049 PEUGEOT 106/CITROEN SAXO

- 1 – Smontare il sedile di serie dalla vettura
- 2 – Montare la base Sparco A seguendo la direzione della freccia
- 3 – Montare sul sedile Sparco la staffa B del pretensionatore dal lato interno del sedile
- 4 – Montare le guide scorrevoli 00493 sul sedile Sparco con l'archetto di regolazione montato nel senso della freccia
- 5 – Montare il complessivo ora assemblato sulla base sedile Sparco precedentemente montata sulla vettura.
- 6 – Montare il pretensionatore e/o attacco cintura smontato dal sedile di serie

- 1 – Remove the standard seat from the car
- 2 – To mount Sparco A base following the direction of the arrow
- 3 – To mount on the Sparco seat the flask B of the pretensioner from the inner side of the seat.
- 4 – To mount the sliding guide 00493 on the sparco seat with the regulation bow mounted on the arrow direction
- 5 – To mount now all the assembled on the Sparco base previously mounted on the car
- 6 – To mount the pretensioner and/or belt attachment disassembled from the serie seat.